
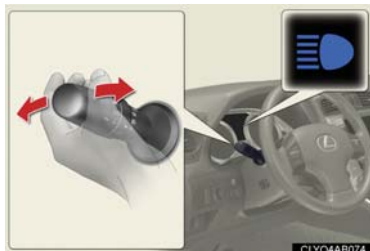
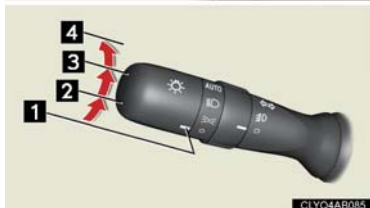



Headlights

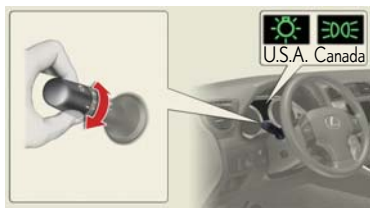

- 1 The daytime running lights turn on.
- 2 The instrument panel, side marker, parking, tail, license plate lights, daytime running lights turn on.
- 3 The headlights and all lights listed above (except daytime running lights) turn on.
- 4 The headlights, parking lights, daytime running lights and other lights turn on/off automatically in accordance with ambient light levels.


To engage the high beams, push the lever forward.
To flash the high beams, pull the lever and hold.

Fog Lights

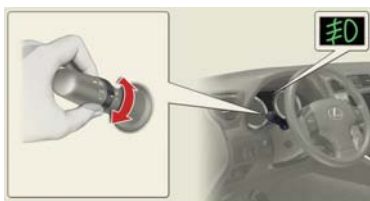

The fog lights can be used only when the headlights (low beam) are on.

- 1 Front fog lights off
- 2 Front fog lights on

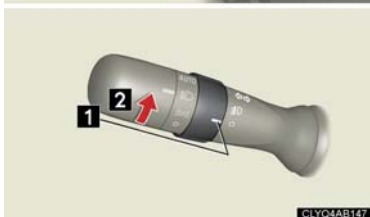

Windshield Wipers and Washer

Intermittent wiper with interval adjuster (if equipped)



- 1 Intermittent operation
- 2 Low speed
- 3 High speed
- 4 Single wipe



CLYQ4AB126

Intermittent operation: Wiper interval can be adjusted by turning the band.



CLYQ4AB556

To spray washer fluid, pull the lever. The wipers will operate automatically.




CLYQ4AB557


n Rain-sensing windshield wipers (if equipped)



- 1 Automatic operation
- 2 Low speed
- 3 High speed
- 4 Single wipe

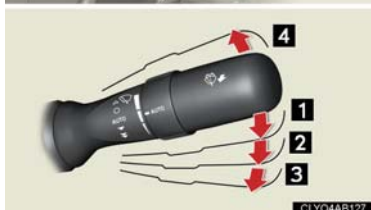

Automatic operation: Sensitivity can be adjusted by turning the band.

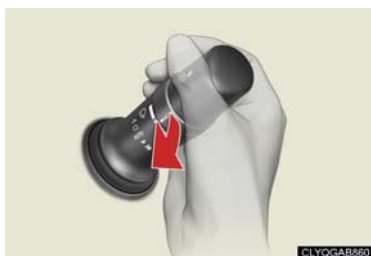

To spray washer fluid, pull the lever. The wipers will operate automatically.

Headlight Cleaner (If Equipped)



The headlight cleaner can be used only when the "ENGINE START STOP" switch is in IGNITION ON mode and the headlights are on.

Rear Window and Outside Rear View Mirror Defoggers



To defog the rear window and the outside rear view mirrors, press the switch.

Press again to cancel.

The system turns off automatically after 15 to 60 minutes.

Instrument Panel Light Control



- 1 Darker
- 2 Brighter